




# Monster SoundStage S1 Mini Circuit Board Replacement

This guide will show how to remove the circuit board in the Monster Soundstage S1 Mini

Written By: Heather Carrillo


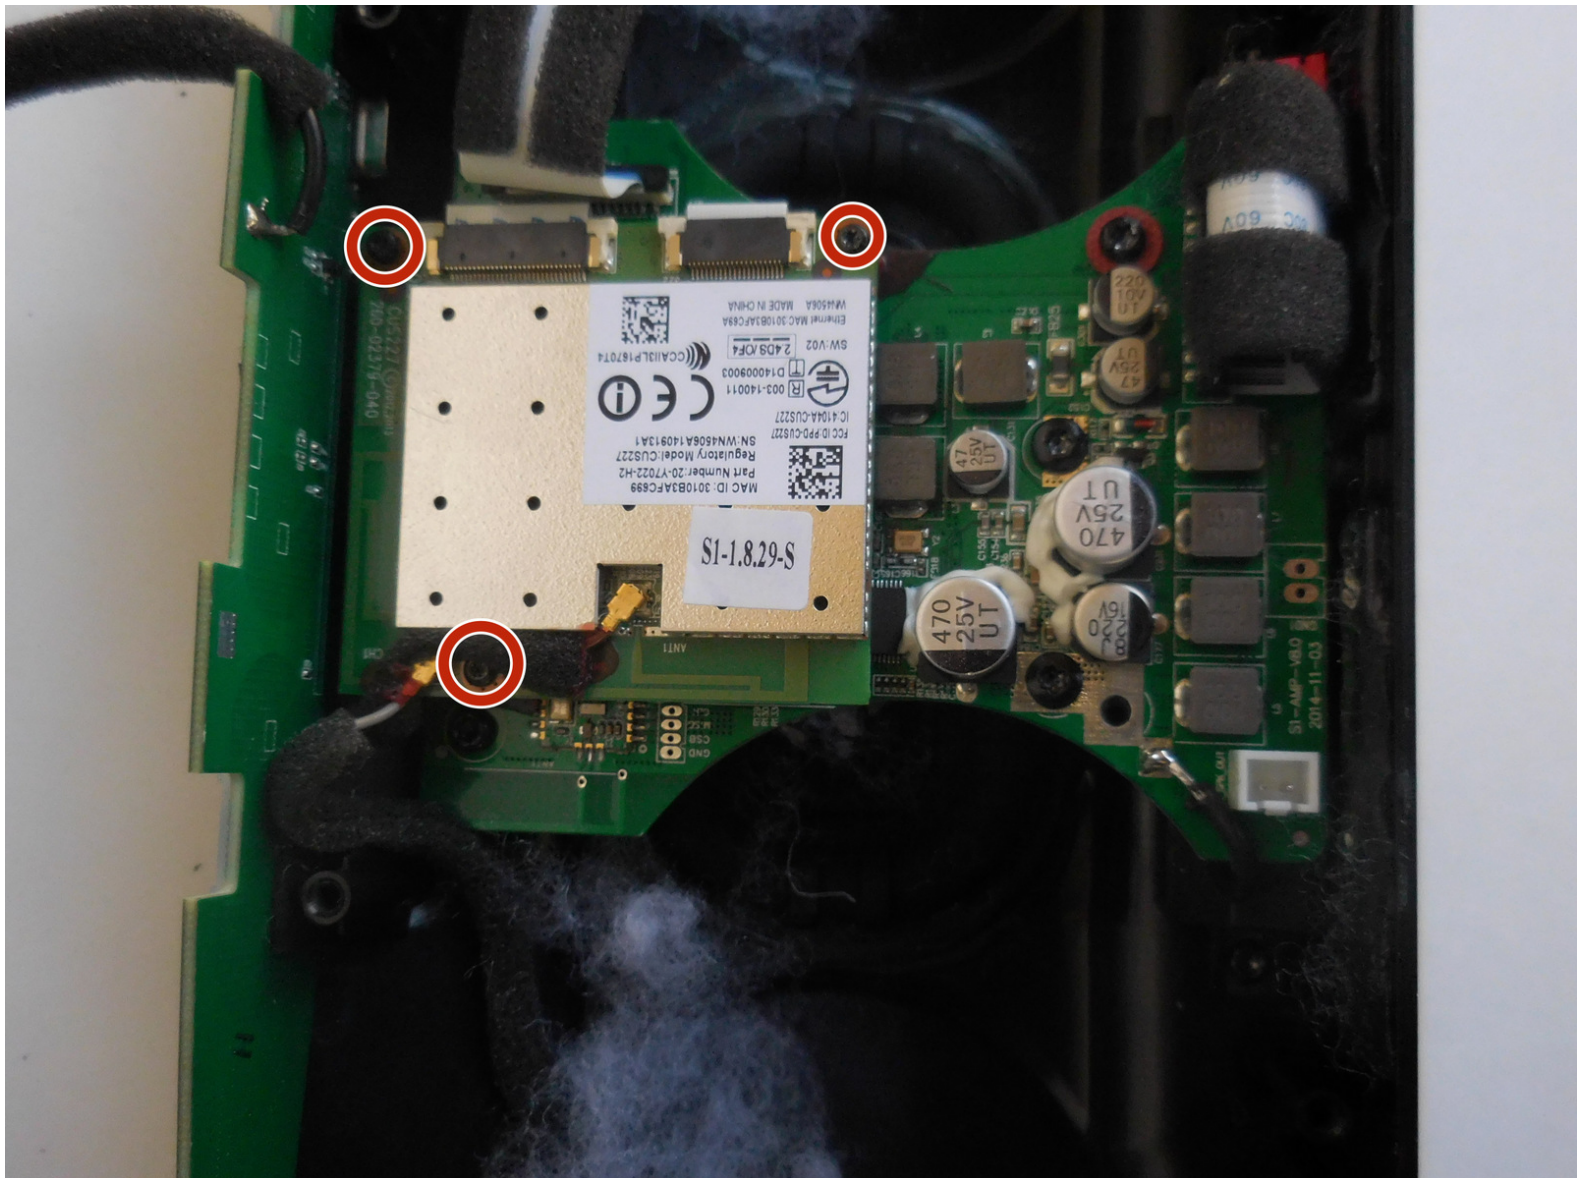




## TOOLS:


- [T10 Torx Security Bit Screwdriver](#) (1)
  - [Soldering Station](#) (1)
-

## Step 1 — Circuit Board

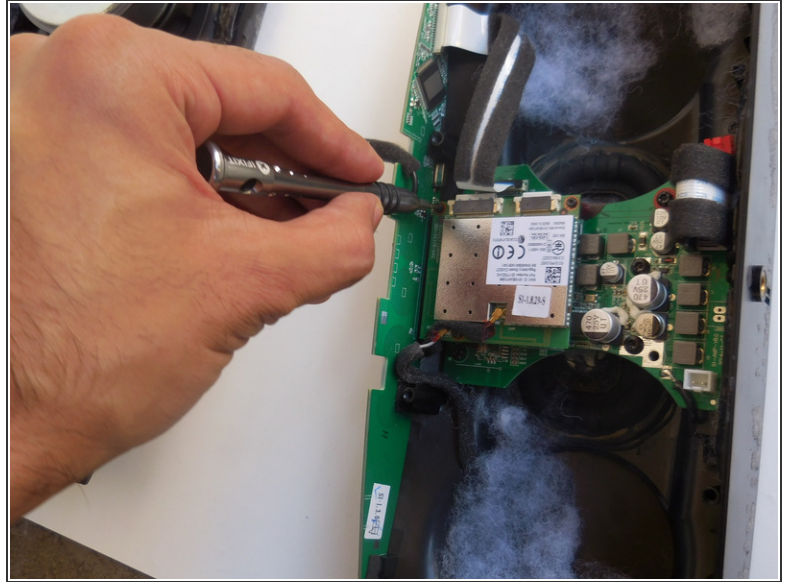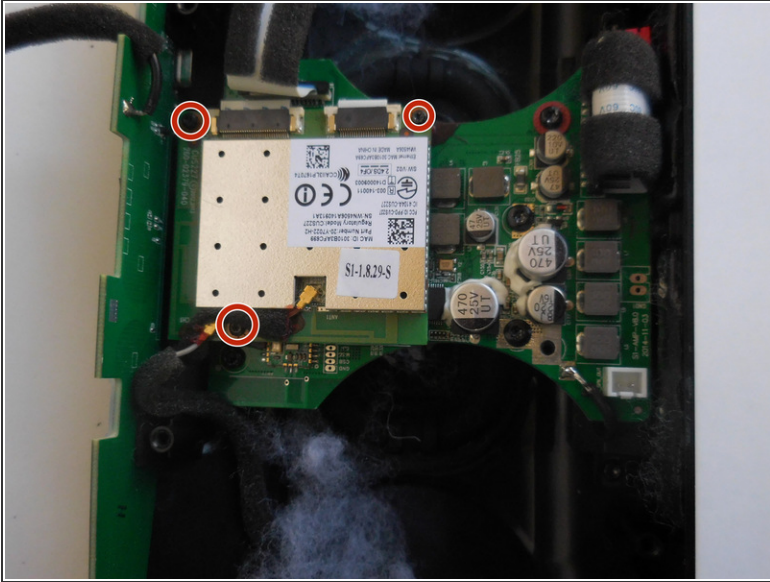

- Remove one 7 mm Torx security screw from the top left corner and two 5 mm Torx security screws from the bottom left and top right corners of the circuit board.



## Step 2

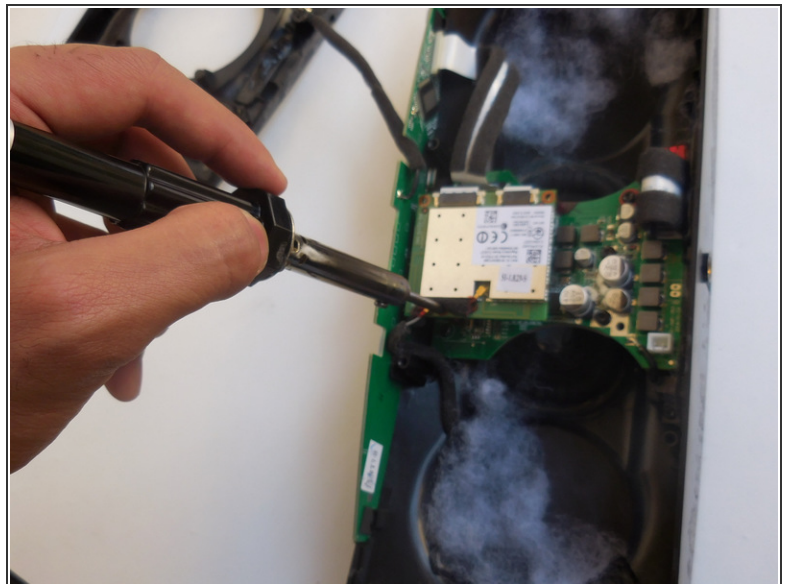

- Solder the two wires connecting the circuit board to the motherboard.



## Step 3

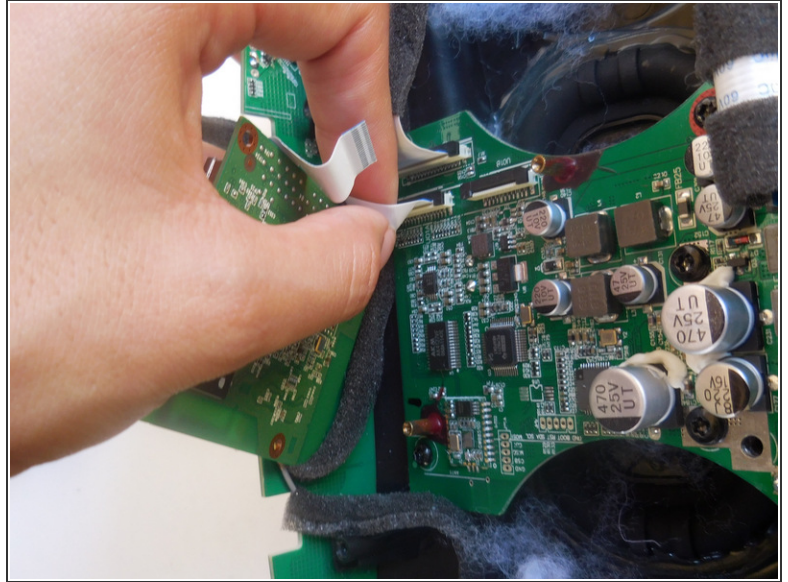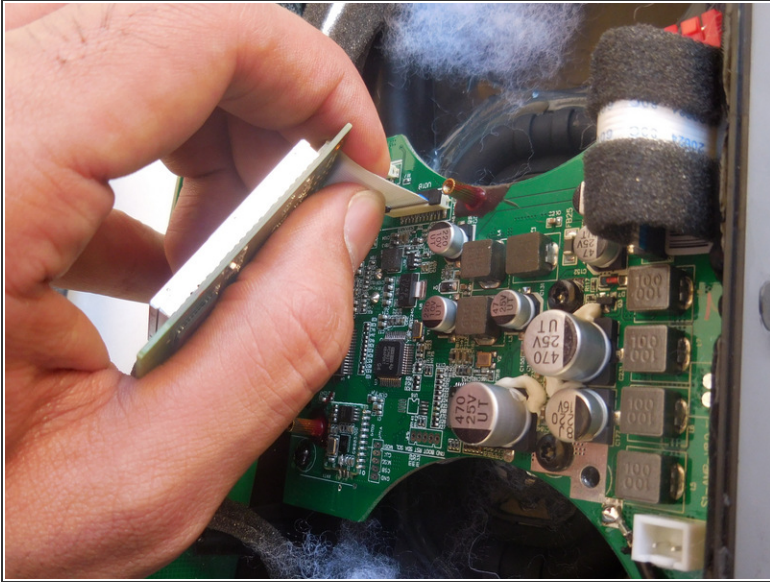

- Remove the two circuit wires by gently tugging on them.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 04:44:34 AM.